


HYDRAFLASH
WINDOW OPENING FLASHING

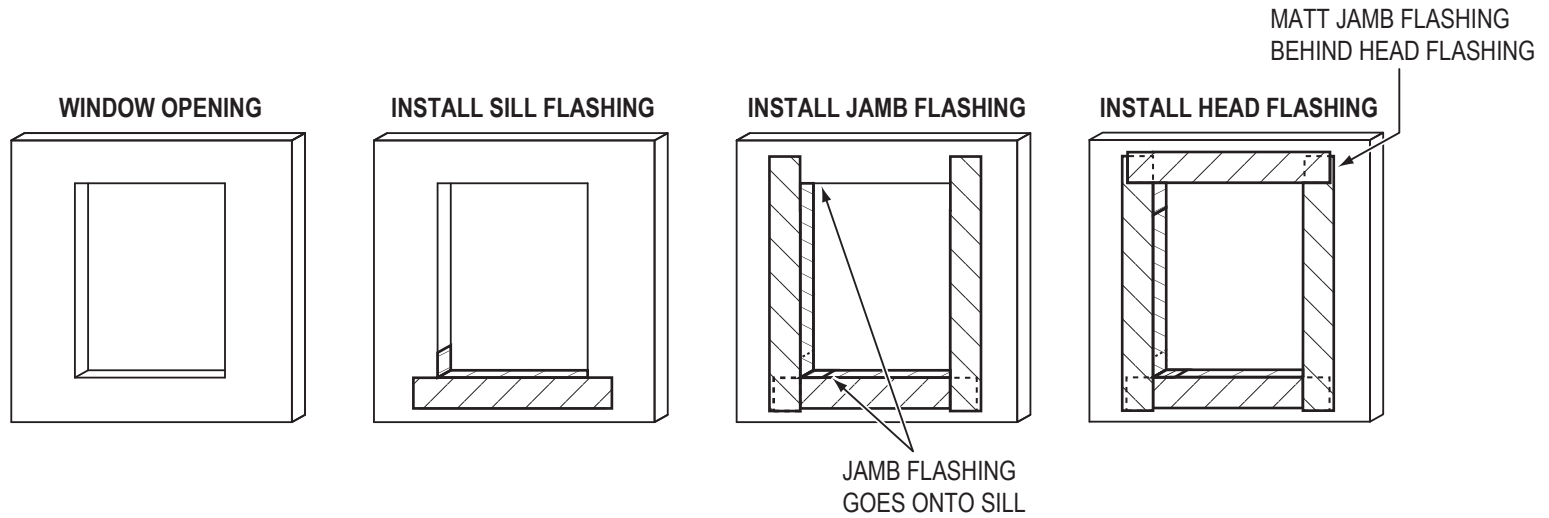

NOTES:

1. APPLY A-TECH VOC PRIMER TO SURFACES.
2. FLASHING SHALL BE A MINIMUM OF 12" WIDE. EXTEND INTO OPENING GREATER THAN DEPTH OF WINDOW AND 3" OUT ONTO WALL.
3. INSTALL FLASHING IN SEQUENCE TO GIVE SHINGLED EFFECT. OVERLAP 2" MINIMUM.

applied
technologies llc

P.O. Box 18476 | Fairfield, OH 45018
(513) 939-3767 | Toll Free (877) 277-5948 | Fax (513) 939-3787
www.appliedtechnologies.com

HF-1