


**DRAIN GUARD 400 / 420 / 700 / 720**  
DRAINAGE COMPOSITE SPLICE

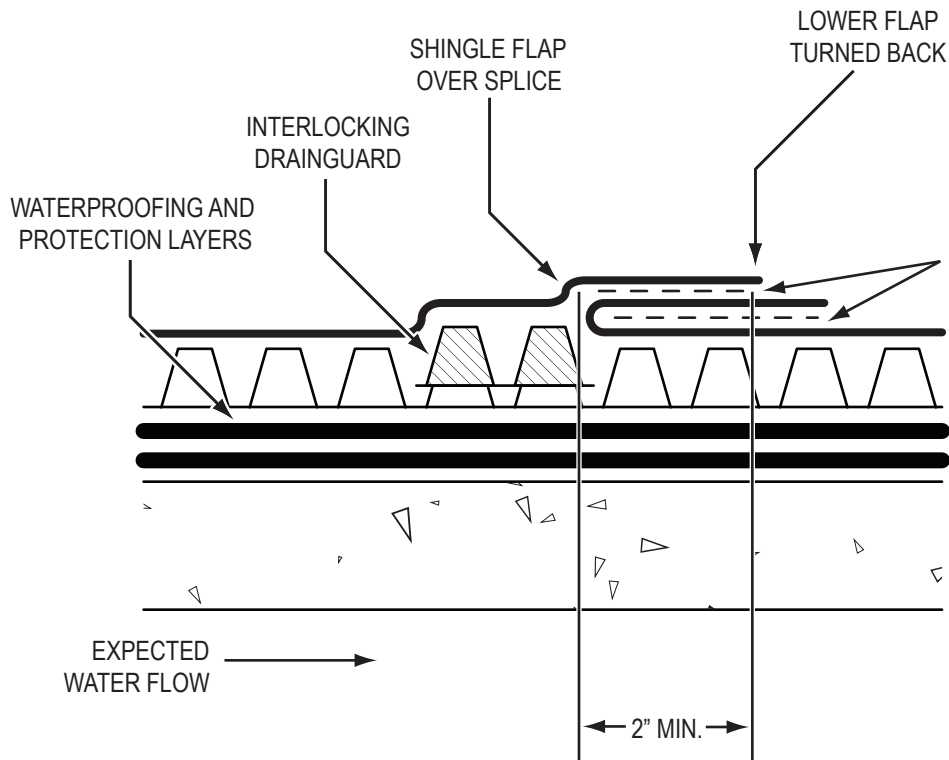

SET FLAPS IN  
GLUE OR TAPE

**NOTES:**

1. SET DOWN STREAM DRAIN COMPOSITE WITH SEAM FLAP TURNED BACK.
2. SET UPPER DRAIN COMPOSITE WITH HARD PLASTIC PLACED ONTO LOWER COMPOSITE.
3. SET INTERLOCKING PEICES
4. EXTEND FLAP OF UPSTREAM COMPOSITE OVER LOWER COMPOSITE.
4. GLUE OR TAPE FLAPS INTO POSITION UNTIL OVERBURDEN IS INSTALLED IS COMPLETED.

**applied**  
technologies llc

P.O. Box 18476 | Fairfield, OH 45018  
(513) 939-3767 | Toll Free (877) 277-5948 | Fax (513) 939-3787  
www.appliedtechnologies.com

**DG-14**